



Step 1

Apply a piece of masking tape to each corner on the top of your decal and adjust until your graphic is level and centered to where you want.

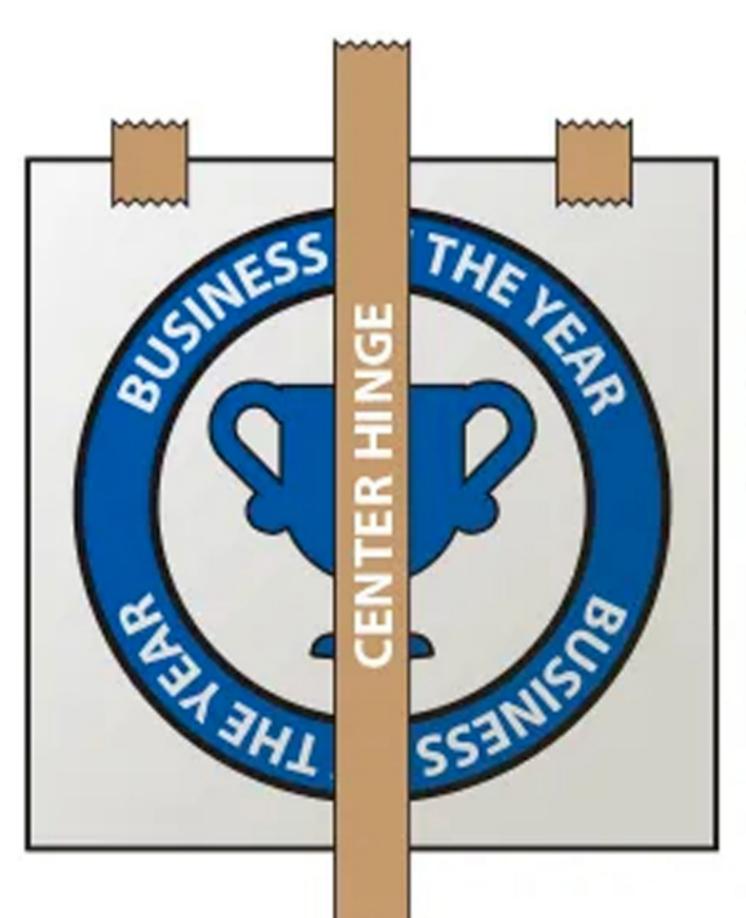


Step 2

When the graphic is placed correctly, apply a long strip of tape vertically down the center of the graphic, creating a "hinge".

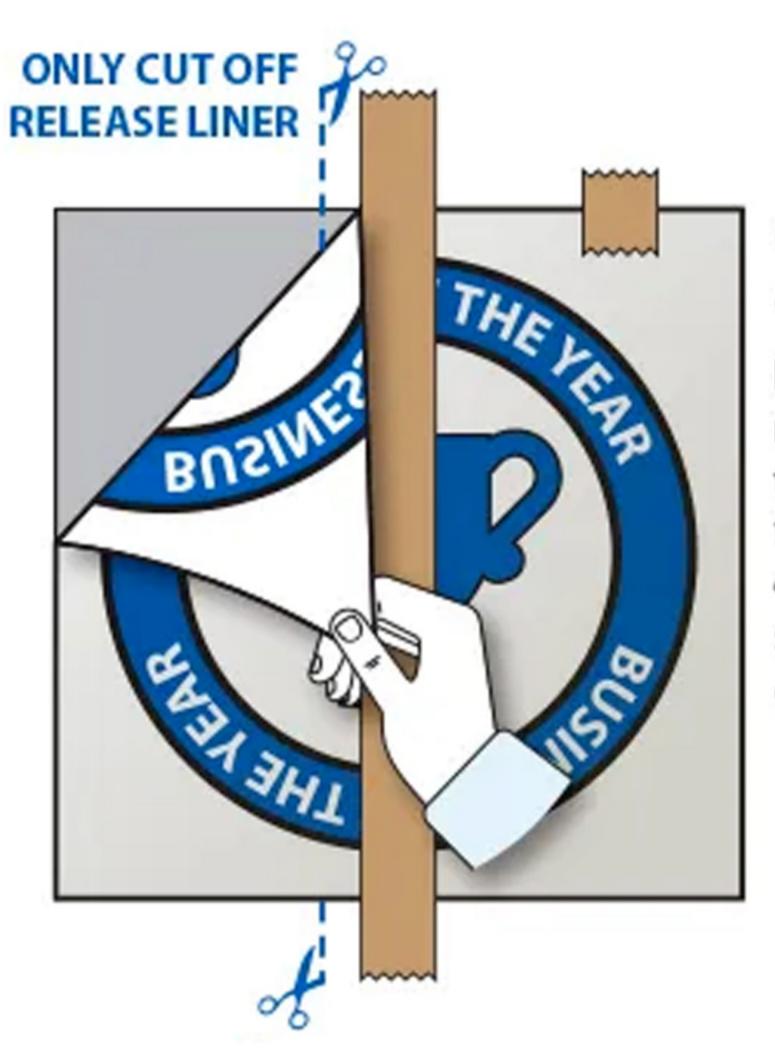

Step 3

Remove the left piece of masking tape, then separate the pre-mask and vinyl decal from the release liner. Carefully cut off the release liner using scissors. DO NOT cut the vinyl decal or clear mask.

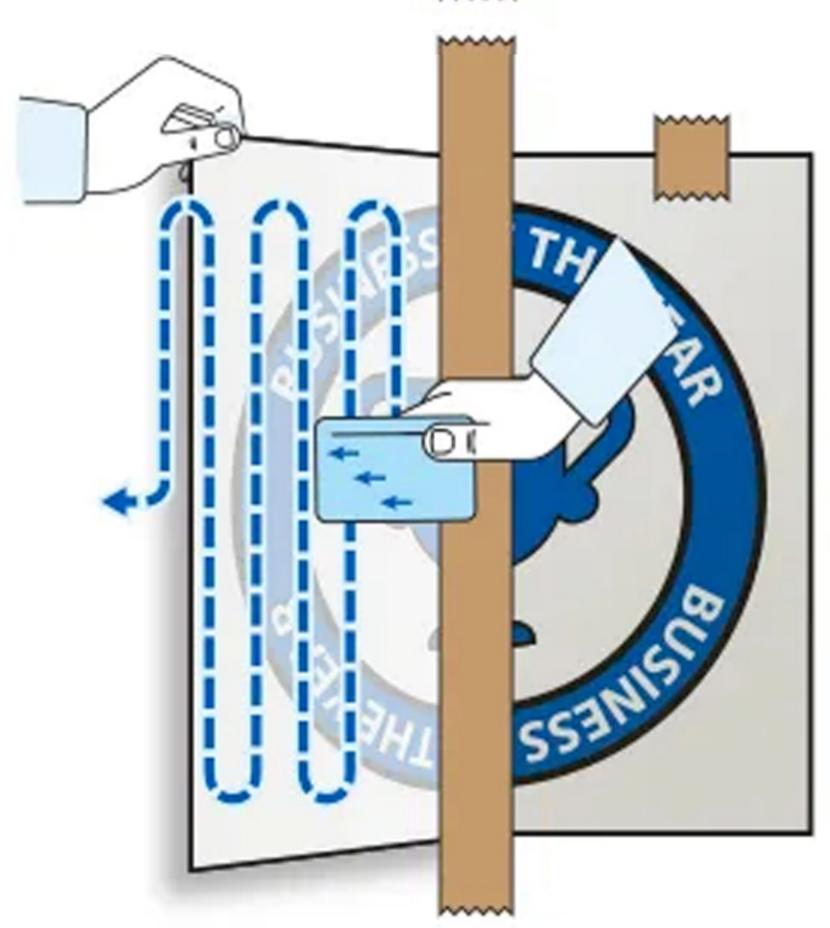

Step 4

Hold the vinyl graphic and pre-mask away from the surface. Begin squeegeeing from the center out, moving up and down in a sweeping motion, slowly marrying the vinyl decal to the surface. Once completed, remove the center hinge and repeat on the opposite side.



Step 5

Slowly remove the pre-mask from the decal at a 45° angle, while keeping the pre-mask flush to the surface. This helps prevent the decal from being pulled up by the pre-mask.